


LE4001


Assembly Instructions

Confirm all hardware is included before you begin assembly.


Supplied Parts:



Bottom

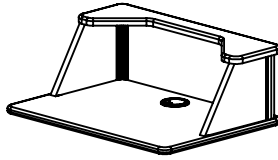

Top

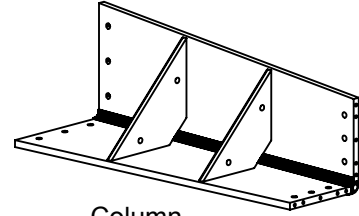


Column

Supplied Hardware:



Wood Dowel
(8)




Metal Dowel
(12)




CAM connector
(12)

Tools required:

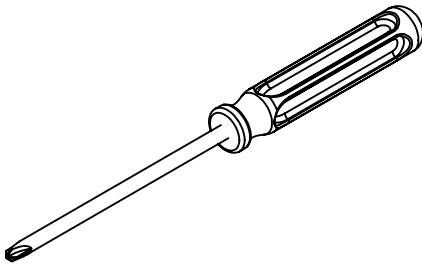


Pozidriv (SupaDriv) screwdriver

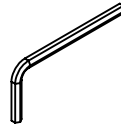



4mm (5/32") Hex Key

Step 1. Inserting Fasteners.

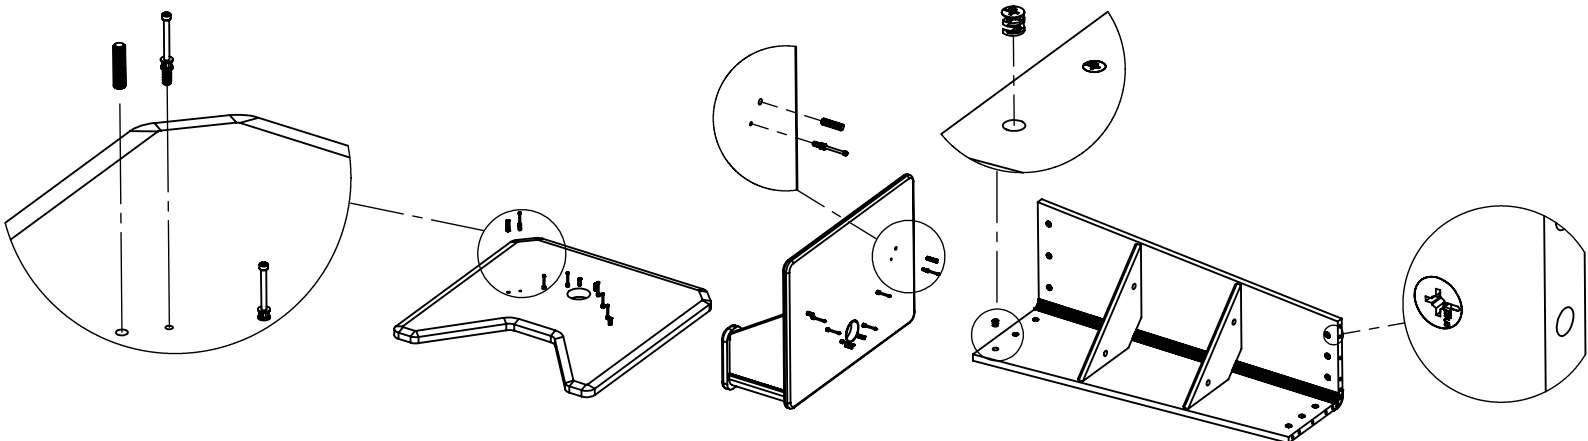

Step 2.

Attach Column to Bottom. Using Hex Key tighten CAM Connectors.

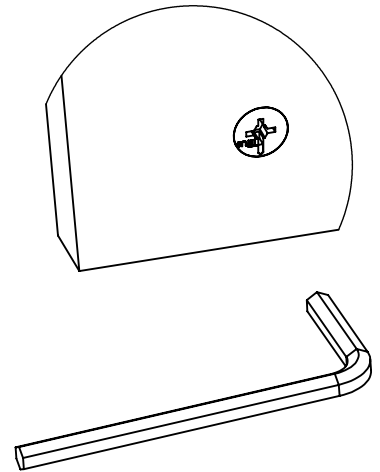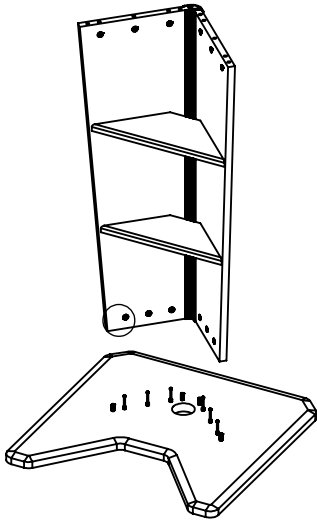

Step 3.

Attach Top to Column. Using Hex Key tighten CAM Connectors.

